


SAFETY INSTRUCTION




READ CAREFULLY BEFORE INSTALLING FIXTURE. PLEASE KEEP THIS MANUAL FOR FUTURE USE.
Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
MAKE CERTAIN POWER IS OFF BEFORE INSTALLING OR MAINTAINING FIXTURE.
CHECK THAT VOLTAGE IS COMPATIBLE WITH FIXTURE DRIVER. USE APPROVED CONNECTORS FOR ALL ELECTRICAL CONNECTIONS.

MAINTENANCE CAUTION


1. Review the wire connection before beginning, and make sure fixture is grounded properly.
2. For lighting controls, follow control instructions carefully.
3. Turn power off and wait for fixture to cool before performing maintenance.
4. Maintenance must be done by professionals.

Wire Connection


Universal voltage driver permits operation at 120VAC thru 277VAC, 50 or 60 Hz.

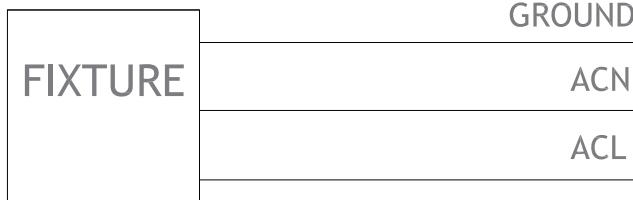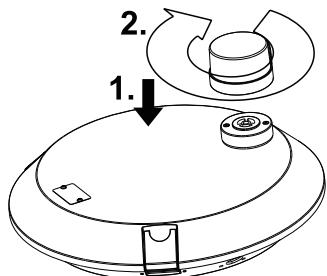
Twist Lock Photocell (Optional)


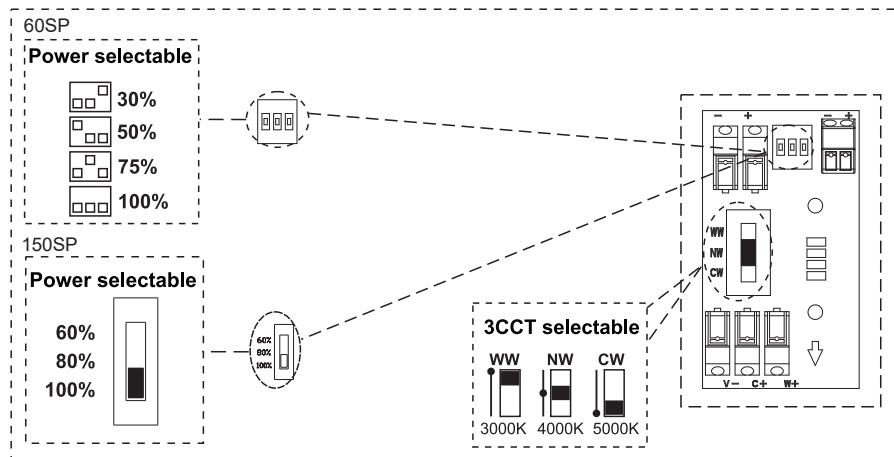
3pin or 5pin or 7pin NEMA →




Note: If the luminaire use 3 pin or 5 pin or 7 pin NEMA, it need to add a waterproof gasket between socket and photocell controller.

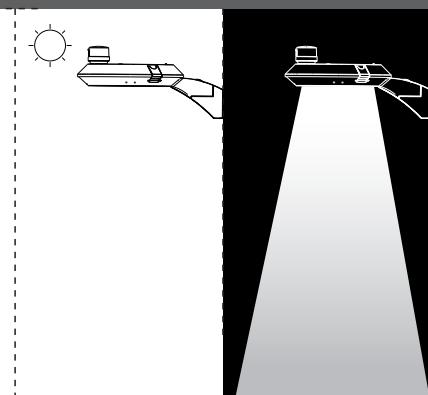


CCT and Power Selectable




Wattage default setting: 100%
CCT default setting: 4000K

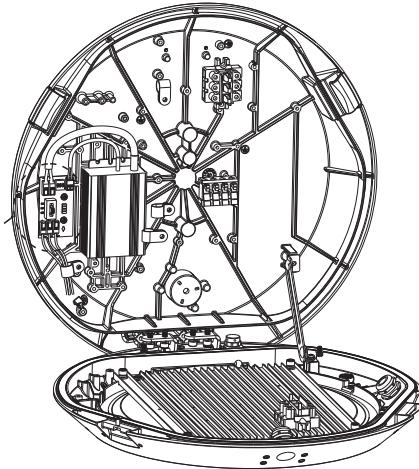

Single Arm Mount

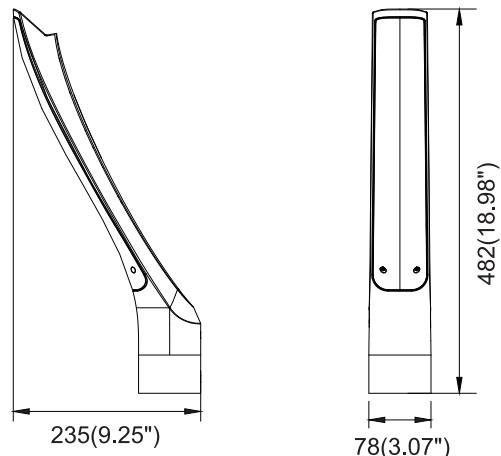


1. 

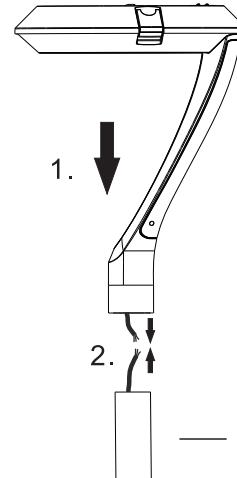


Round Pole:
Φ 2 3/8" (60mm)


2. 

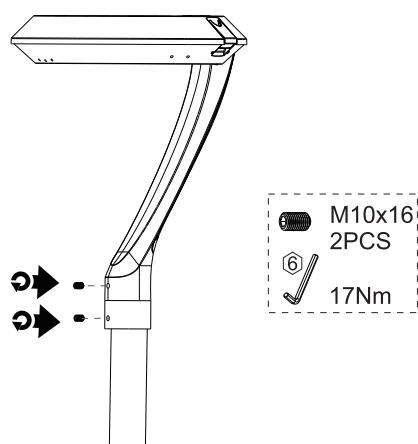


3. 

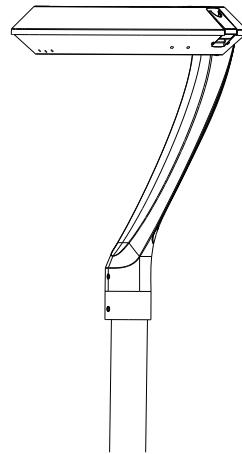

Twins Arm Mount

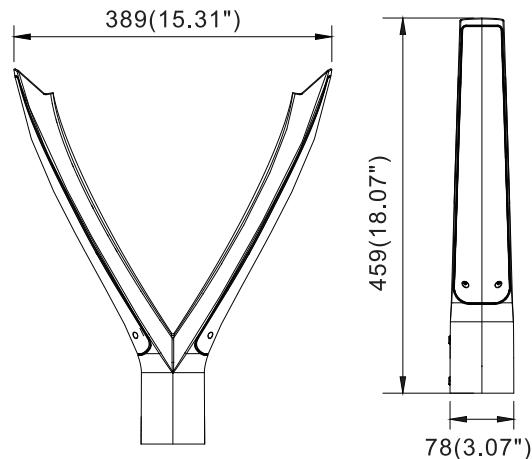


1.

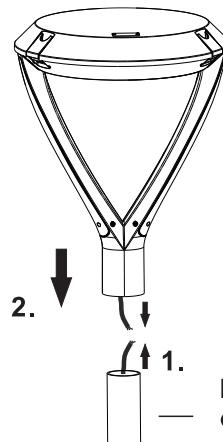


Round Pole:
Φ 2 3/8" (60mm)



2.

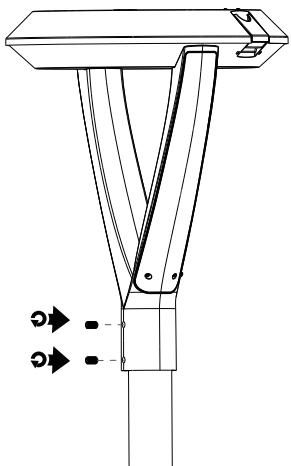

3.

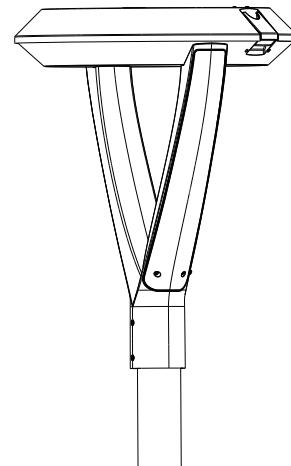





Side Arm Mount

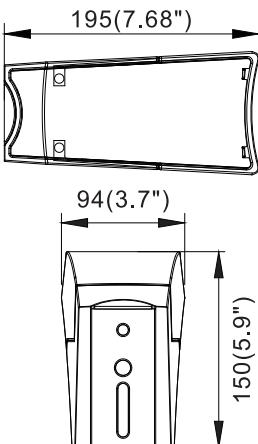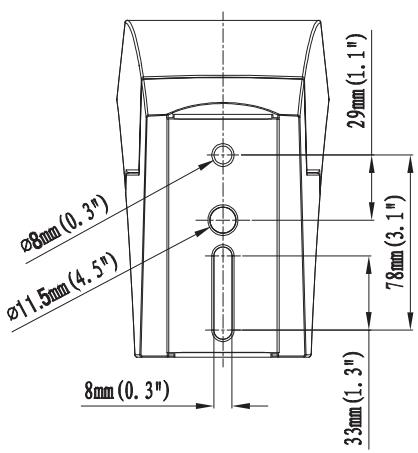





1.

M4
2PCS
1.2Nm

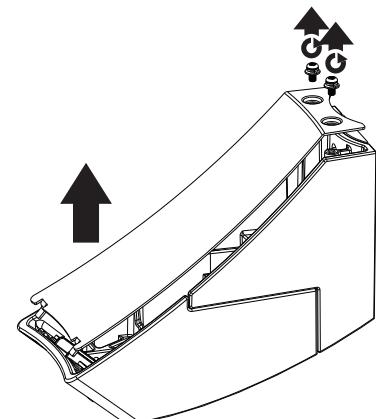

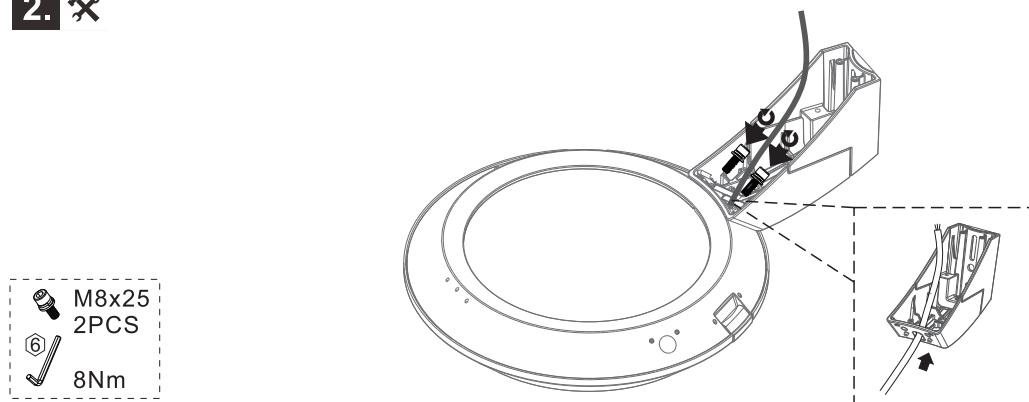
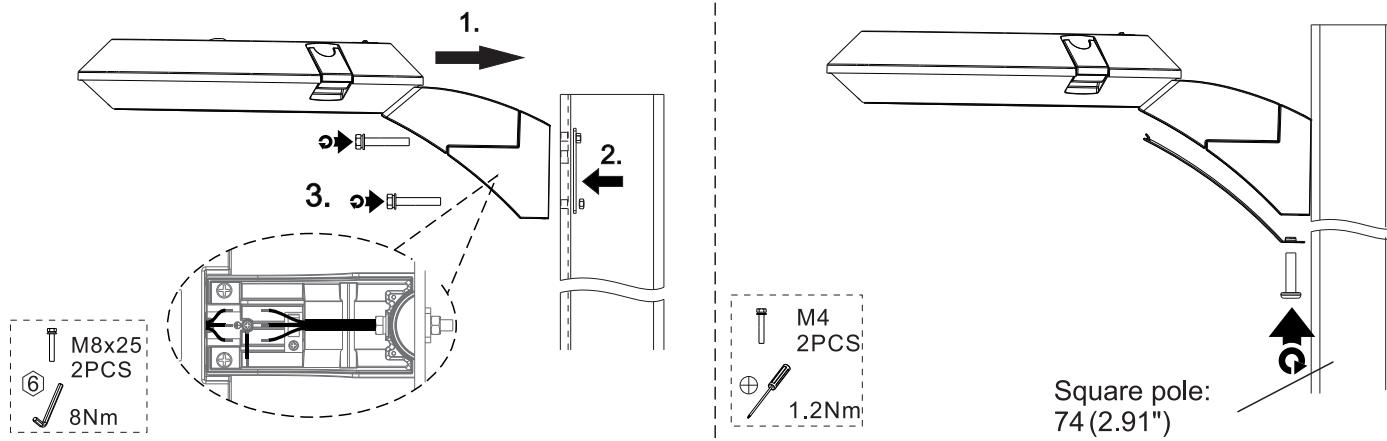
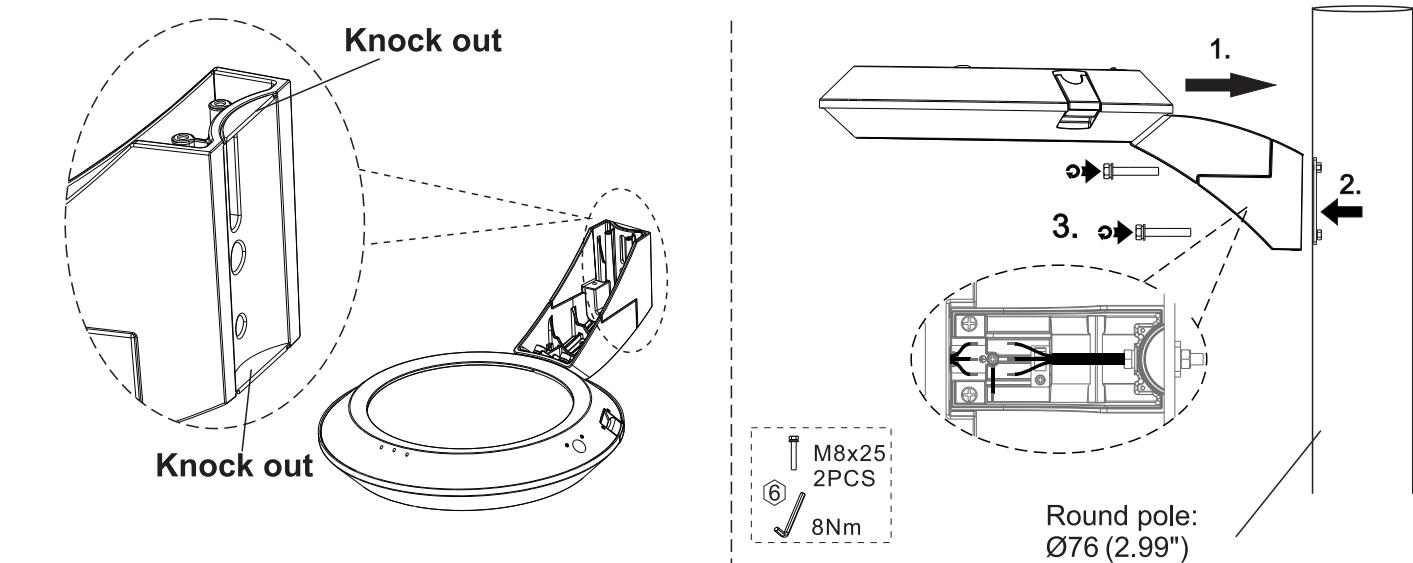
2. 

3. 
Square pole installation

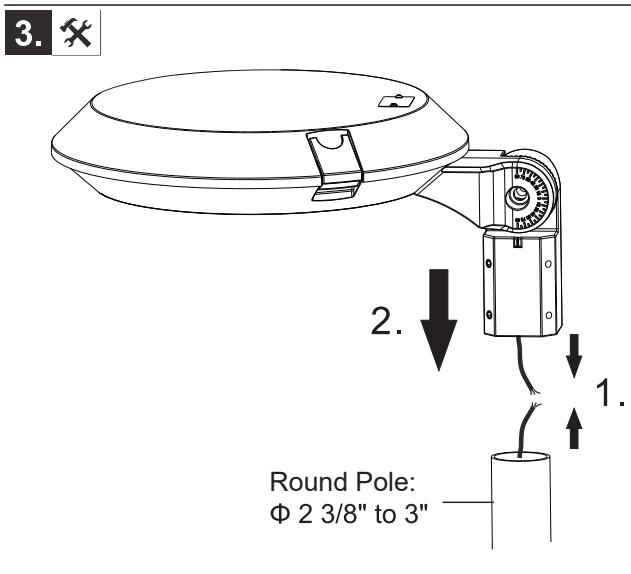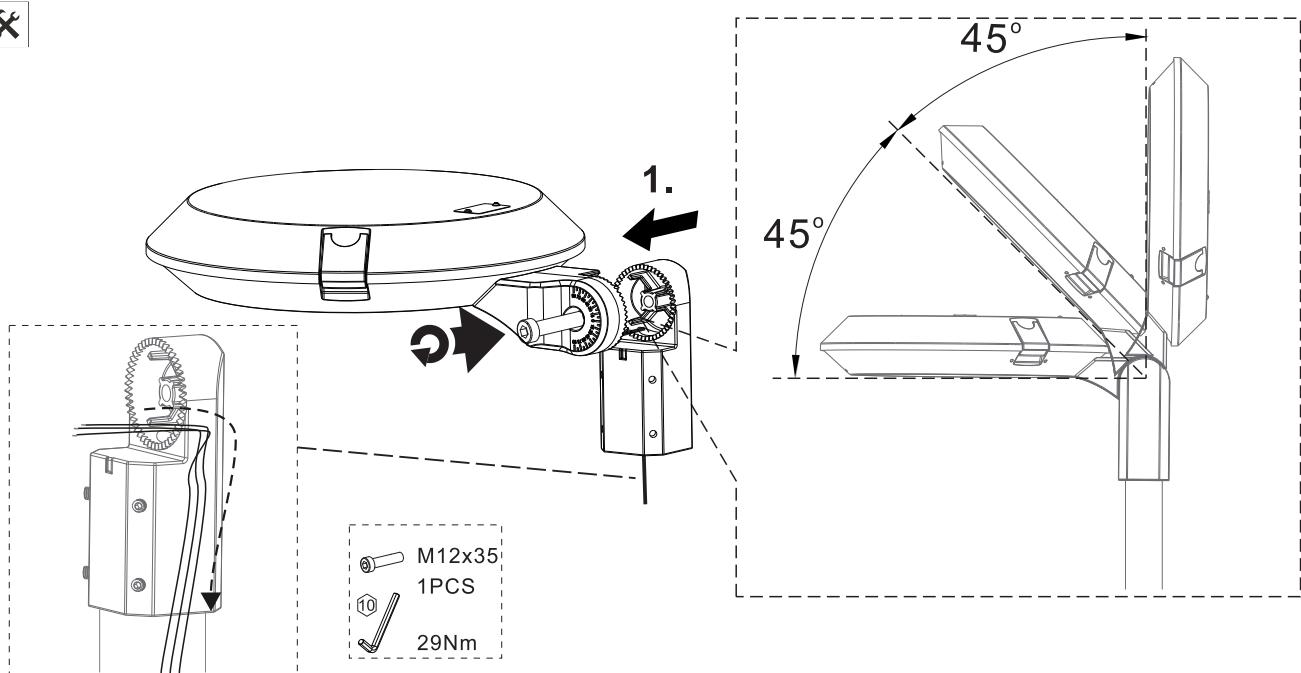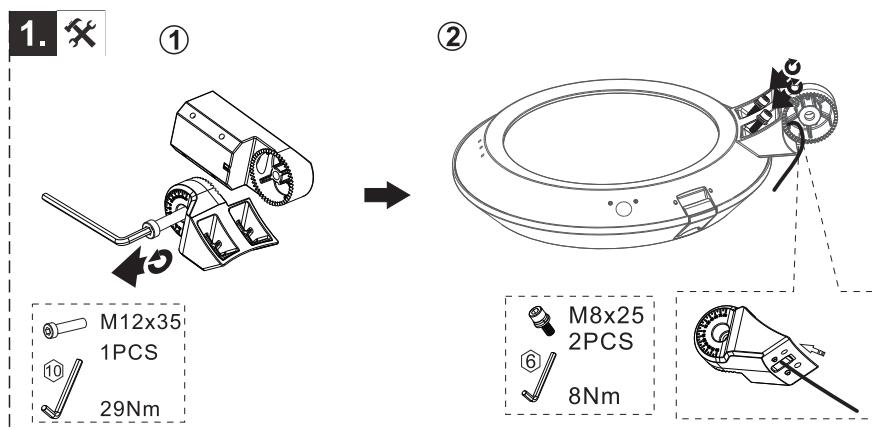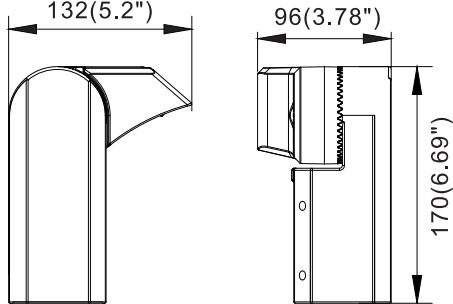Round pole installation


Slip Fitter Mount

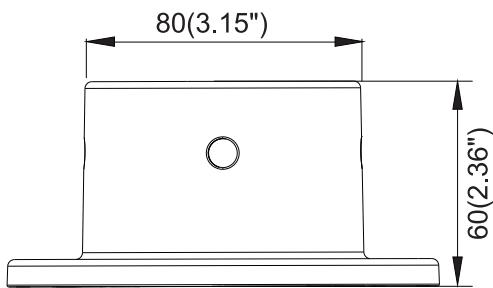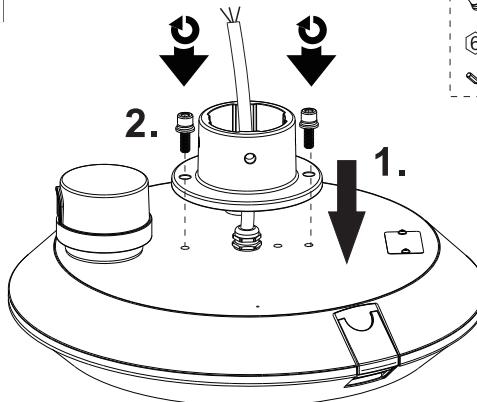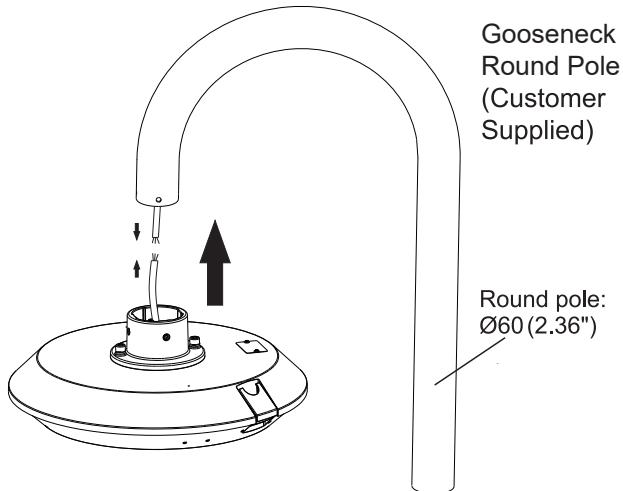

Gooseneck Mount

Ref#:20251222


1.

2.

3.
