



SAFETY INSTRUCTION



READ CAREFULLY BEFORE INSTALLING FIXTURE. PLEASE KEEP THIS MANUAL FOR FUTURE USE.

Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

MAKE CERTAIN POWER IS OFF BEFORE INSTALLING OR MAINTAINING FIXTURE.


CHECK THAT VOLTAGE IS COMPATIBLE WITH FIXTURE DRIVER. USE APPROVED CONNECTORS FOR ALL ELECTRICAL CONNECTIONS.

MAINTENANCE CAUTION



1. Review the wire connection before beginning, and make sure fixture is grounded properly.
2. For lighting controls, follow control instructions carefully.
3. Turn power off and wait for fixture to cool before performing maintenance.
4. Maintenance must be done by professionals.

WIRE CONNECTION

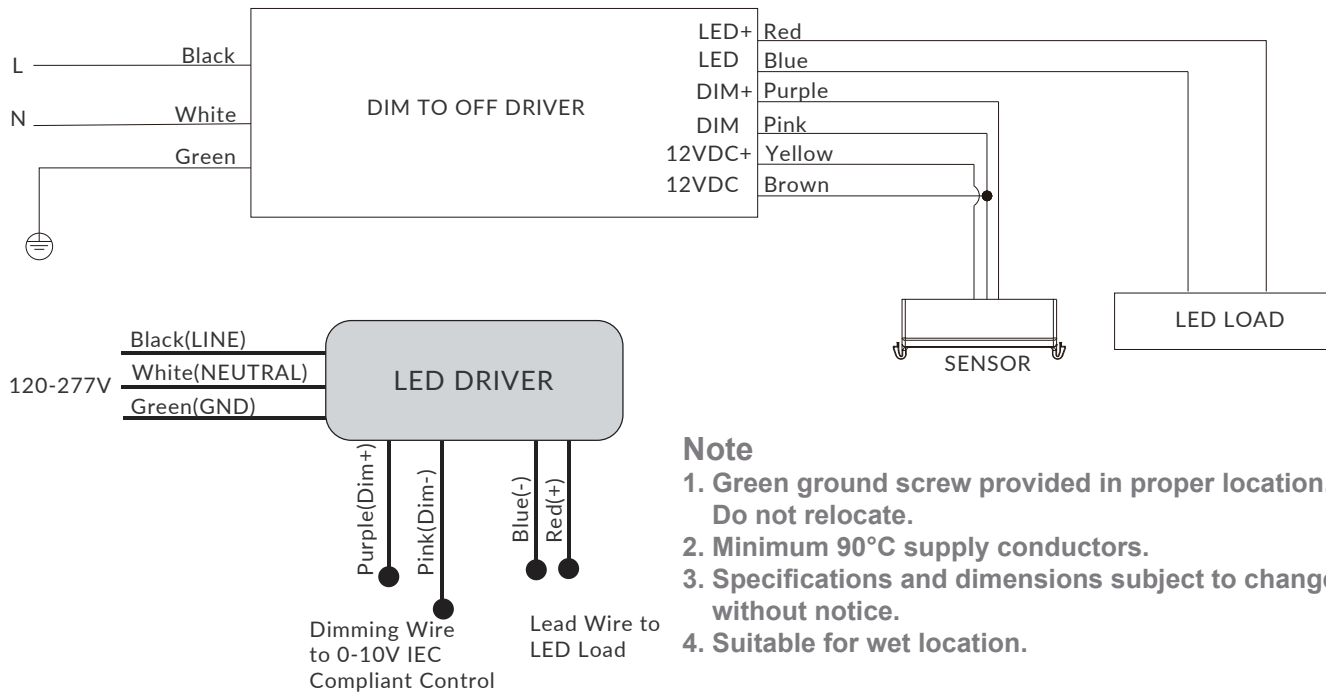


INSTALLATION

WARNING

Risk of injury or damage. Make certain power is OFF before installing or maintaining fixture.


ACCESSORY PACK

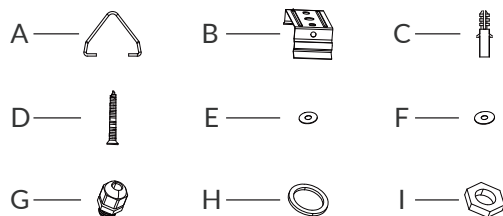


No.	CONTENTS	2ft/4ft	8ft
		QUANTITY	
A	V-HOOK	2	3
B	SURFACE MOUNT BRACKET	2	3
C	PLASTIC TUBE	2	3
D	SELF-DRILLING SCREW	2	3
E	METEL GASKET	2	3
F	RUBBER GASKET	2	3
G	PLUG	1	1
H	SEALING RING	1	1
I	NUT	1	1

A: Surface Mounting


Step 1. Release latches by pulling top of latch away from housing. Detach LED tray and lens from fixture.

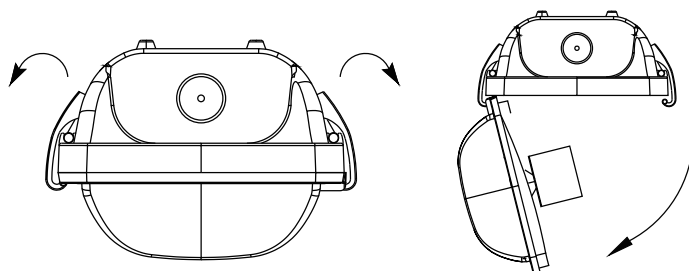


Step 2. Connect an appropriate length of power cord to driver as shown in below figure¹. (the flexible cord supplied by others)

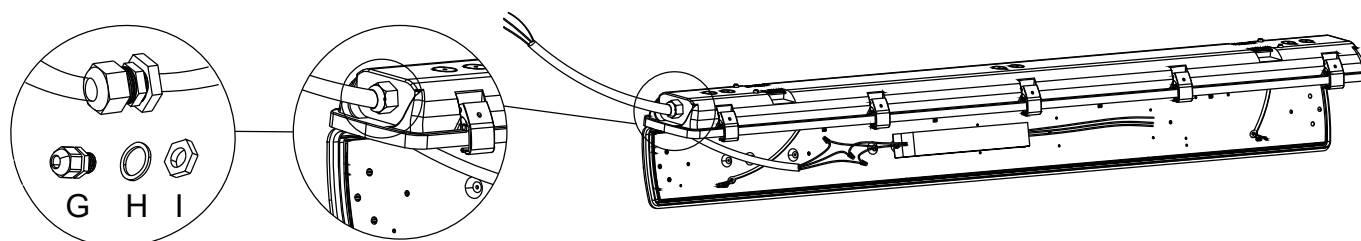


Step 3. Reattach LED tray and lens to fixture by reversing step 1.

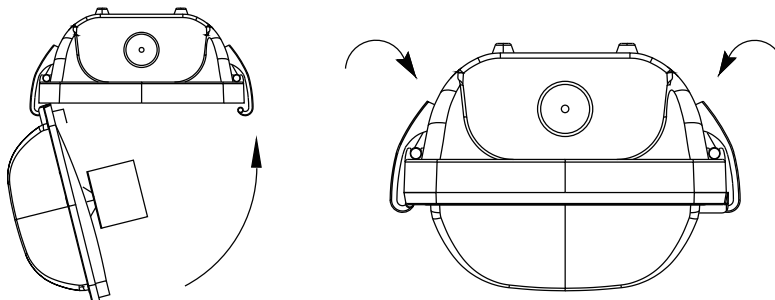


Step 4. Locate and drill holes, then install clips to the ceiling surface using hardware found in hardware kit.

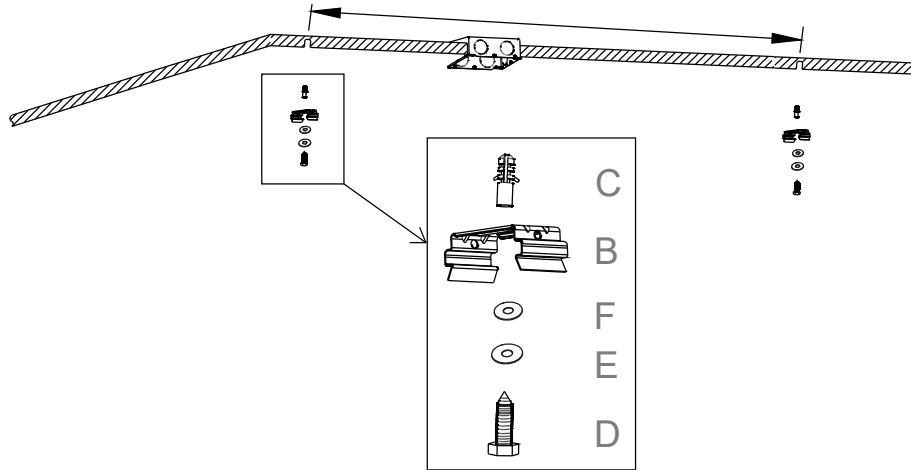

Step 5. Connect fixture to AC power refer to general wiring diagram.

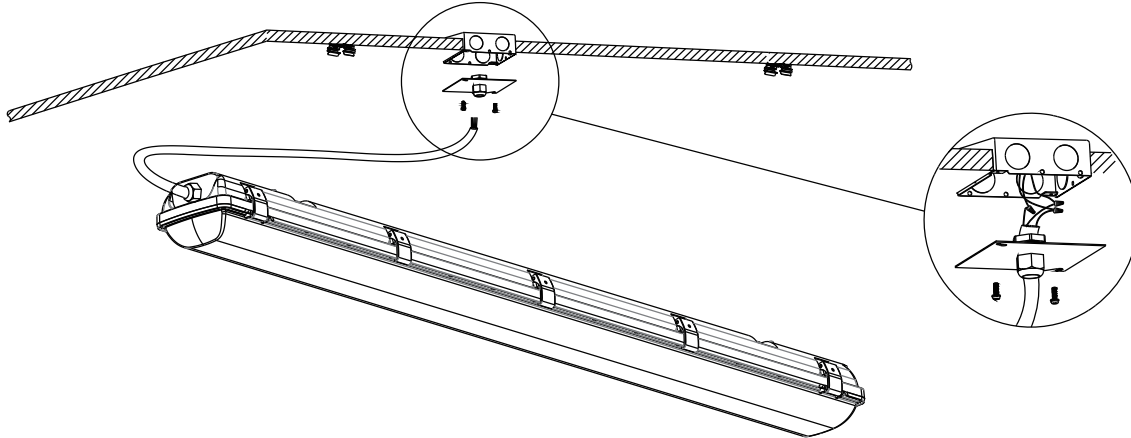

Step 6. Press fixture housing to the clips until both sides of the housing recesses are secured.

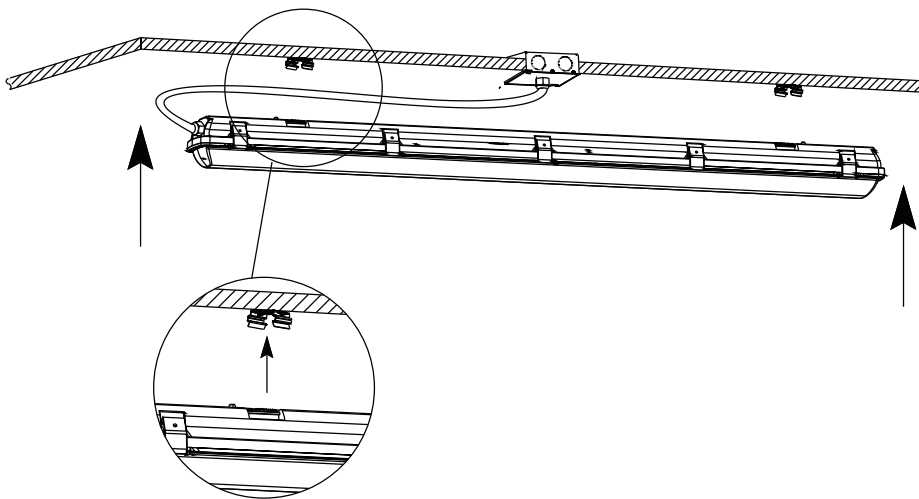


Field-Adjustable Wattage & CCT

The end users may adjust the color temperature and lumen output respectively by the two DIP switches. Each DIP switch is accommodated with 3 options (left, middle and right), corresponding to 3 color temperatures and 3 powers respectively, which can perform the desired color temperature and lumen output combination.

1. DIP switches are located onto the side of the fixture.

2. Select a wattage and color temperature by sliding the figure1 switch left or right respectively to the desired value.

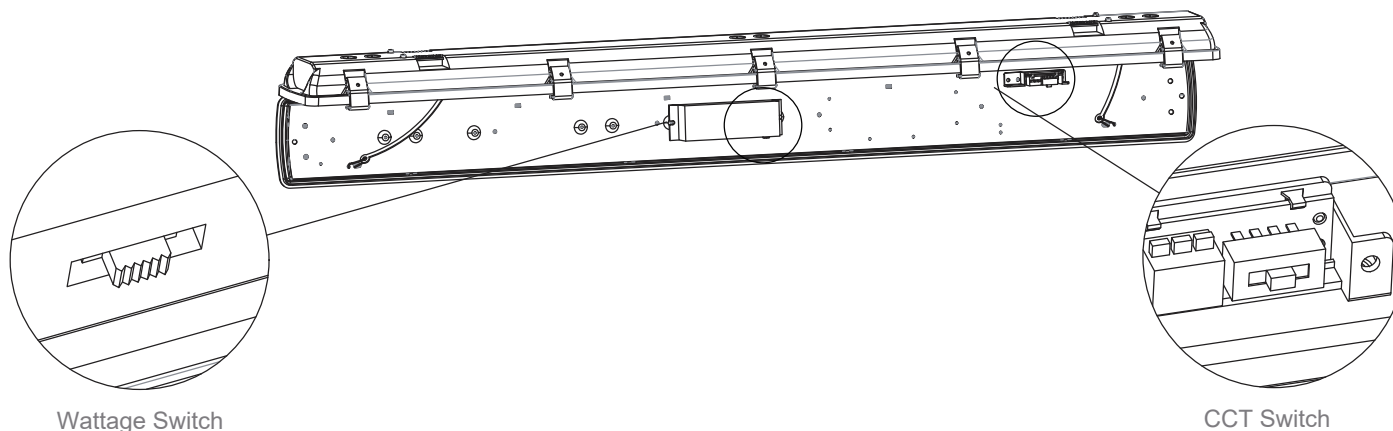

Size	Power Range	Default Wattage
2FT	20W/25W/30W	30W
4FT	34W/38W/45W	45W
8FT	65W/75W/90W	90W

CCT Option	Default CCT
3500K/4000K/5000K	4000K