

## IMPORTANT



1. READ ALL INSTRUCTIONS.
2. INSTALL IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODE REGULATIONS.
3. THIS PRODUCT IS INTENDED TO BE INSTALLED AND SERVICED BY A QUALIFIED, LICENSED ELECTRICIAN.
4. DO NOT INSTALL IN WET LOCATIONS. FOR DRY AND DAMP USE ONLY.
5. TURN OFF ELECTRICAL POWER BEFORE INSTALLING OR SERVICING FIXTURE IN ANY WAY.
6. TO REDUCE THE RISK OF FIRE AND OVERHEATING, MAKE SURE ALL CONNECTIONS ARE TIGHT.
7. UNDER NO CIRCUMSTANCES CAN THE LIGHTING FIXTURE BE COVERED WITH HEAT INSULATION GASKET OR SIMILAR MATERIALS.

## SHOCK HAZARD




MAY RESULT IN SERIOUS INJURY OR DEATH.

TURN POWER OFF AT CIRCUIT BREAKER PRIOR TO INSTALLATION OR SERVICING.









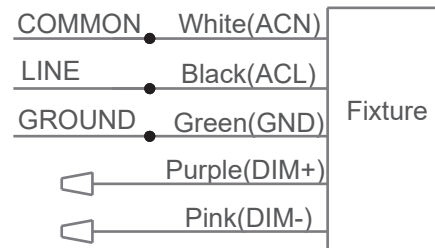


## INSTALLATION

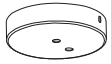Universal Voltage permits operation at 120VAC thru 347VAC, 50 or 60 Hz.

- a. Connect the voltage supply Line to out AC-L.
- b. Connect the voltage Neutral supply to our AC-N line.
- c. Connect the green/yellow ground lead to the supply ground lead.
- d. If 0-10V Dimming is used, connect the supply positive dimming lead to our 0-10V(Dim+) terminal.
- e. If 0-10V Dimming is used, connect the supply positive dimming lead to our 0-10V(Dim-) terminal.




## ACCESSORY FOR DRY CEILING MOUNTED


										
Canopy A x1	Canopy B x1	Bracket x2	Screw A (UNC8-32) x2	Screw B	Butterfly Drywall Anchor x2	Anchor x4	Screw C x4	Clasp x2	Aircraft Cable kits x2	Wire nut x5

- 1: Install aircraft cables to two canopys, tighten all screws.
- 2: Install one bracket to the J-box(by others).
- 3: On the other mounting side, according to different ceilings to choose the right fastener to install another bracket to the ceiling, then install canopy B to the bracket.
- 4: Press the clasps of the aircraft cable to the fixture, making sure they hang the fixture firmly.
- 5: Feed the cord through the canopy A, connect wires as shown in wiring diagram with wire nuts, then install the canopy A to J-box.
- 6: Adjust the height of luminaire by pressing gripper and pulling steel cable.


**Drywall Ceiling**

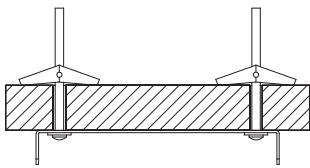


**Wooden Frame Ceiling**




**Cement Drywall**



**DRILL PATTERN**

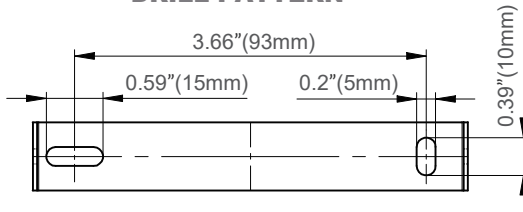


SIZE	Weight	L1
2FT	3.3lbs / 1.5Kg	14"(356mm)
4FT	5.5lbs / 2.5Kg	38"(965mm)
8FT	10lbs / 4.5Kg	86"(2184mm)

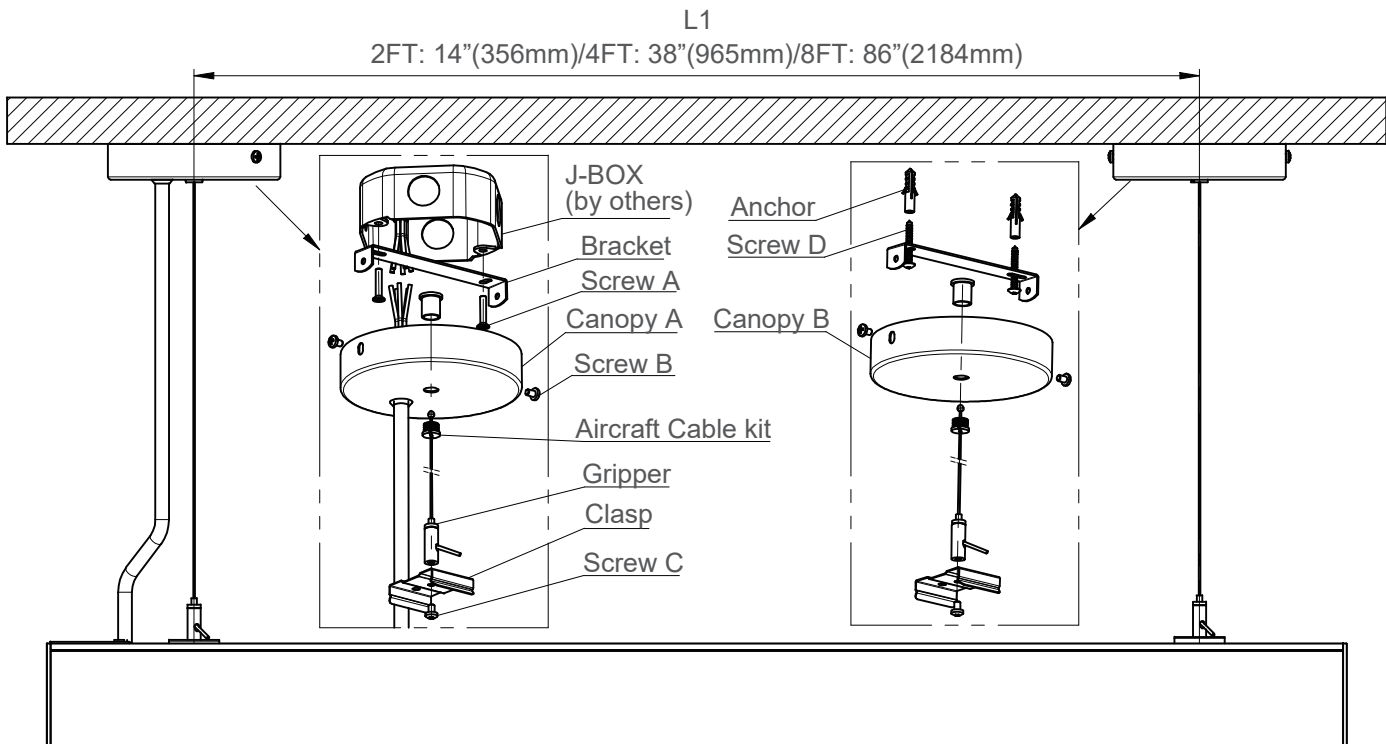


**Install UP Light Module:**

- 1: Remove the back cover of fixture.
- 2: Pull out the quick connector wrapped with label "UP light" from fixture, connect to the connector of UP light module.
- 3: Push the up light module into fixture back slot.

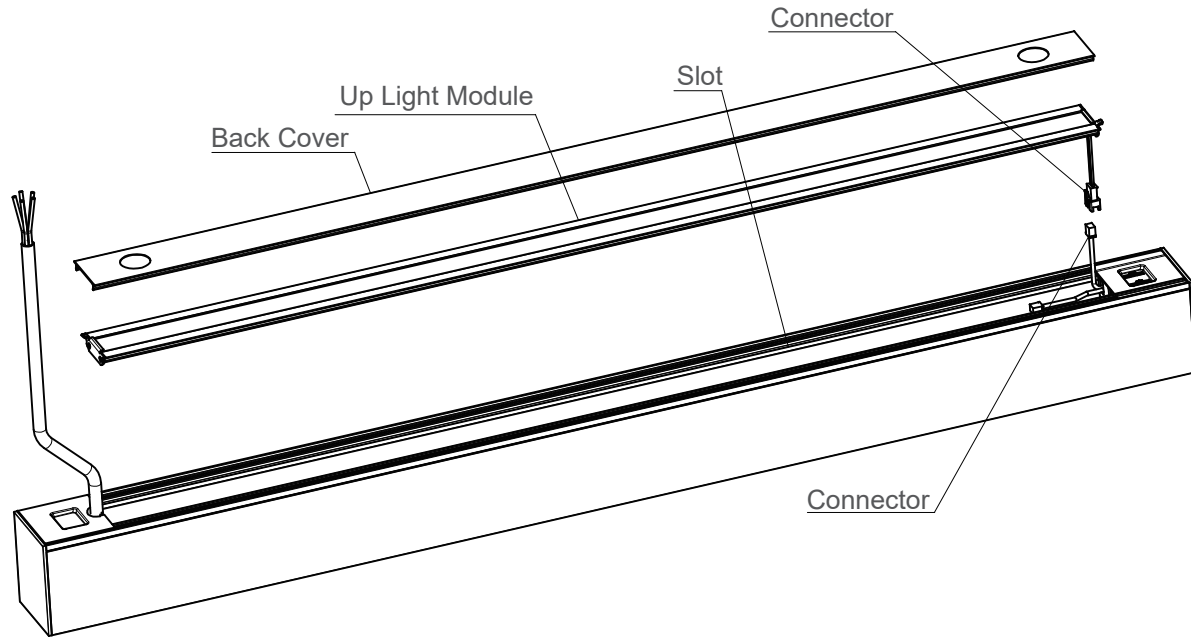

**Field-Adjustable Wattage & CCT**

1. DIP switches are located onto the fixture back.
2. The highest wattages and 4000K are default setting.
3. Select wattage and CCT by DIP switches.

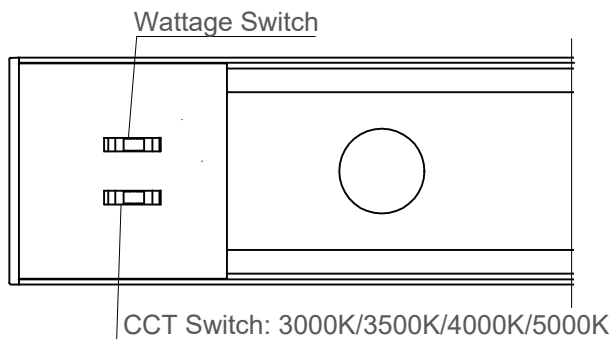

SIZE	Wattage
2FT	25W/20W/15W
4FT	50W/40W/30W
8FT	100W/80W/60W